



NUMBERS REFERENCE	
Number	Representing
E1	Consumer Unit/ Fuse Box
E2	Lighting Point
E3	Lighting Pull Switch
E4	Light Switch 1 way
E5	Light Switch 2 Way
E6	2 Gang Light Switch
E7	Switched Single Socket
E8	Switched Double Socket
E9	Unswitched Fused Spur
E10	Switched Fused Spur
E11	Switched Fused Spur Flex Outlet
E12	Cooker Switch
E13	Cooker Outlet
E14	Shower Switch
E15	Central Heating Programmer
E16	Storage Radiator Point
E17	Aerial Socket
E18	BT Socket
W1	Kitchen Sink H&C
W2	Basin H&C
W3	Washing Machine H&C
W4	Toilet
W5	Bidet
W6	Bath H&C
W7	Shower H&C
W8	Dishwasher H&C
W9	Soilpipe
W10	Boiler
W11	Immersion
W12	Header Tank
W13	Storage Tank
W14	Electrical Bond
W15	
W16	
W17	
W18	
G1	Gas Point (Not Used)
G2	Boiler Supply
G3	Hob Supply
G4	Oven Supply
G5	Gas Fire
G6	
G7	
G8	



ELECTRICITY ———
 GAS ———
 WATER ———

IF YOU HAVE CAUSE TO ISOLATE A SUPPLY
 ALWAYS INFORM AN AUTHORISED TRADESMAN
 NOT TO SCALE